



Top Toolbar

Unlocks the lectern doors, provides access to whiteboard functions, logs the system off, turns on/off the projector/screen.

Preview Source

Controls all video, computer and document camera functions. Initiates the preview screen and the remote panel (for some devices)

Controls

Initiates the remote panel for the devices listed (useful if the remote panel is previously turned off)

Preview Screen (Top Screen)

Provides a preview of the device selected in the Preview Source. The fullscreen tab provides a fullscreen preview; the switch tab moves the image to the Annotation and Viewing Screen

Annotation Screen (Viewing / Bottom Screen)

Shows the screen as it should appear in projection. Also important to moving audio clips to be played over the speakers. By clicking on the screen or the annotation tab, you can annotate any item that is being presented. (We do not have multiple projectors; therefore these tabs do not appear)

Remote Panel (appears in location of Honors College logo)

This panel provides remote control buttons for devices selected in the sidebar or on the "Controls" panel. For operability, see device information

Volume (round button, bottom right)

This button controls the volume, the up arrow increases volume and the down arrow decreases volume. See a supervisor if further volume control is unsatisfactory using this device.

Advanced Audio

This button provides access to controls for the bass and treble of the audio output as well as type of audio available. It also provides access to the control for the audiocassette player and LP turntable.